



[www.omegagunlock.com](http://www.omegagunlock.com)

## OMEGA Internal Chamber Gun Lock These Instructions intended for Over/Under shotguns of gauge: .12 Ga, .16 Ga, .20 Ga, .28 Ga, & .410 Ga.

The Omega Internal Chamber gun locking system is designed to help you keep your firearm stored in a safe condition. This lock does not relieve the handler of the firearm from always paying strict attention to gun safety rules. For protection from theft, the use of a safe or other secure system designed to secure your firearms is recommended. Always observe all of these warnings and instructions when using this gun lock.

**READ THE OWNERS MANUALS SUPPLIED WITH YOUR FIREARM & LOCK. KEEP FIREARMS AND AMMUNITION STORED SEPARATELY AND SECURELY. KEEP FIREARMS AND AMMUNITION OUT OF REACH OF CHILDREN. THIS LOCK IS FOR USE AS AN AID TO YOUR SAFETY MEASURES. GUN LOCKS ARE NOT A SUBSTITUTE FOR SAFE FIREARM HANDLING AND STORAGE. SAFETY AND SAFE FIREARMS HANDLING IS EVERYONE'S RESPONSIBILITY. Do not dry fire the shotgun chamber locks, as damage could occur to the lock, voiding the warrantee.**

The use of the Omega chamber lock will help prevent your firearm from being used (discharged) by unauthorized persons. This lock is not designed to prevent theft. Strict safety practices should always be followed even when your gun is locked.

### BEFORE INSTALLING YOUR OMEGA CHAMBER LOCK

Note: Your Omega chamber lock is custom designed to fit only the gauge you purchased it to lock.

**Only use this chamber lock on the designated shotgun gauge. This lock is not designed for use on multiple firearms.**

Before inserting the lock into your firearm, holding the front of the lock, engage the key into the lock, turning counter clockwise until the key stops turning. This ensures that the expandable aluminum ring is totally relaxed (not expanded). Then turn key 1/8th turn (22.5 degrees) clockwise. This ensures the free movement of the screw inside the lock. Your lock is now ready to insert into your firearm. With each continued use of the Omega chamber lock, the aluminum locking ring conforms to fit tighter in the chamber. Therefore, we recommend that you lock (tighten) and unlock (un-tighten) your new Omega chamber lock inside your firearm at least five (5) times before you lock and store your firearm for the first time. (See Installation instructions below)

- Unload all ammunition in a safe manner as explained in the firearm's owner's manual.
- Put your gun's safety mechanism in the "on safe" position as explained in the owner's manual supplied with your firearm, if it is able to operate on "safe".
- Visually inspect the chamber, feed mechanism and magazine to assure yourself that the firearm is completely unloaded, and that the chamber is clean, dry and free of obstructions.

### OMEGA CHAMBER LOCK INSTALLATION FOR SHOTGUNS

- Break-open the shotgun action. (See Figure 1)
- Align arrow on back of lock with the extractor and insert the lock(s) into the chamber(s) (See Figure 2)
- Hold your thumb on outside edge of gunlock to keep lock aligned with extractor. Then insert self-centering L-key into back of Lock(s). Turn slightly until you feel key drop into lock. (See Figure 3)
- Holding firearm in one hand, while pushing forward, turn key clockwise 90 degrees with your other hand. As you would tighten any nut with a wrench, continue to firmly tighten lock until you see or feel no more turning motion, and the lock no longer falls out by weight of gravity. (See Figure 4) Then tighten the lock another one-third (1/3) of a turn. If you cannot tighten the lock another one-third (1/3) of a turn, we recommend the following: First, lay firearm with lock in chamber flat on table or other solid surface with break-open barrel extending over edge. Hold firearm firmly in place with one hand and insert key with your other hand. Tuck the arm holding the key against your body and gently lean your body towards the key. Continue to lean on key with your body weight applying turning pressure until you see or feel no more turning motion. (See Figure 5) If double barrel, perform same procedure on second lock. Once completed move on to number 5 below.
- Once the lock is installed and tightened you may close the shotgun to store.

### UNLOCKING OMEGA CHAMBER LOCK FOR SHOTGUNS

- Insert key into the rear of lock. Turn counter-clockwise until lock is loose.
- Remove Lock(s) from chamber by tilting up to remove lock by force of gravity.
- Once the chamber lock is in your hand, visually inspect chamber to insure it is clear of any obstructions.
- Your firearm is immediately ready for use.

WARNING: NEVER INSTALL GUN LOCK ON A LOADED FIREARM.

WARNING: STORE THE GUN LOCK KEY IN A SEPARATE LOCATION FROM YOUR FIREARM. ALL FIREARMS SHOULD BE STORED AWAY FROM CHILDREN.

WARNING: IF GUN LOCK OR KEY BECOMES DAMAGED IN ANY WAY DO NOT ATTEMPT TO USE ON FIREARM. REFER TO GUARANTEE SECTION FOR REPLACEMENT INFORMATION.

CAUTION: NEVER STORE LOCK WITH ITS RINGS EXPANDED (IN THE LOCKED, TIGHTENED POSITION) OUTSIDE THE FIREARM, AS DAMAGE COULD OCCUR, VOIDING THE WARRANTY.

NOTE: MAKE CERTAIN LOCK IS CLEAN AND FREE OF DIRT OR OIL AFTER EACH USE. THIS MAINTAINS THE LIFE OF THE LOCK.

### Limited Warranty

Omega warrants the Lock is free from defects in material and workmanship. The Lock meets the requirements of California Penal Code § 12088.1, as of January 1, 2002, for a firearms safety device for the type of firearm identified on the packaging of the Lock. In addition, if the Lock is damaged as a result of unauthorized use, Omega will replace it free of charge. Simply send the damaged Lock to Omega along with your name, address and \$4.95 per Lock for postage and handling. This warranty extends for the life of the Lock. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

### Disclaimer of Warranties

There are no warranties which extend beyond the face of this limited warranty. Omega disclaims all other warranties, express or implied, regarding the Lock, including any implied warranties of merchantability or fitness for a particular purpose. No gun lock offers complete protection against the accidental or intentional misuse of firearms. Given sufficient time, energy or tools, any locking device can be compromised.

### Limitation of Remedies

Your exclusive remedy if the Lock is defective is limited to the repair or re-placement of the defective Lock. Send the defective Lock to Omega along with your name and address. Omega will send you a new or repaired Lock. If Omega does not repair or replace a defective Lock, Seller will refund the purchase price of the defective Lock.

### Limitation of Damages

Omega's entire liability for any defective Lock shall in no event exceed the purchase price for the defective Lock. This limitation applies even if Omega cannot or does not repair or replace any defective Lock and your exclusive remedy fails of its essential purpose.

### No Consequential or Other Damages

Omega has no liability for general, consequential, incidental or special damages, including any damages arising out of the owner's or another person's personal injury or loss of life. Some states do not allow exclusion or limitation of incidental or consequential damages, so the limitations above may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### Obtaining Service

If you have a claim under this warranty please contact us at: Omega Safety Systems, Inc., P.O. Box 1517, Idyllwild, CA 92549, Tel: 1-866-850-9193. When you contact us, please provide us with your name, address, telephone number, and a brief description of the problem with the Lock that you are having.

### Firearm Safety Device Safety Tips

- All firearms should always be assumed to be loaded and should be handled as such.
- Learn the mechanical and handling characteristics of the firearm you are using.
- Don't rely on your gun's "safety."
- Keep firearms pointed in a safe direction at all times, even when unloaded.
- Store firearms unloaded, locked, and in an out-of-sight location out of the reach of children.
- Store ammunition separately under lock and key.
- Store gun lock key in a place separate from the gun.
- Gun locks are not a substitute for safe firearm handling and storage.
- Safety and safe firearms handling is everyone's responsibility.
- Teach children basic principles of firearm safety. When encountering a gun: **DO NOT TOUCH IT! TELL AN ADULT!**

Laws concerning firearms ownership, storage and handling vary among states and local jurisdictions. Learn and comply with your state and local laws and those of any jurisdiction to which you plan to transport or use firearms.

For further orders or to contact Omega:  
[www.omegagunlock.com](http://www.omegagunlock.com)



Fig.1



Fig.2

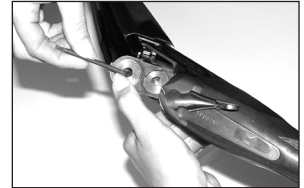


Fig.3



Fig.4

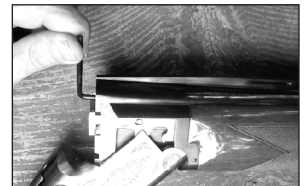


Fig.5



Fig.6